

## Operating and maintenance instructions poultry pliers ZG3

When operating and maintaining the pliers, there are many risks of injury and property damage. That's why:

- Please read these operating instructions carefully before operation and maintenance.
- Always observe the notes and information contained therein, especially the safety notes.
- If you lose the operating instructions, you can get a new copy online:

[www.cors.technology](http://www.cors.technology)


In the event of unauthorized modifications, the manufacturer is not liable for any liability or warranty.

Warranty and liability claims are also excluded if they can be traced back to one or more of the following causes:

- Improper use of the product
- improper assembly, operation and maintenance of the product
- Failure to observe the information in the operating instructions
- Inadequate maintenance or repair
- Force majeure

### Staff requirements

- The product may only be operated by competent personnel who is authorized to do so in accordance with the law.
- It may only be used for the intended purpose.
- The device should only be used when necessary.
- In accordance with the COUNCIL REGULATION (EC) No 1099/2009, an anesthetic is required before if the animal weighs > 5 kg.
- Keep out of the reach of children.
- There is a risk of injury if misused.
- Danger! Do not keep any body parts between moving ones components to avoid bruises and cuts.

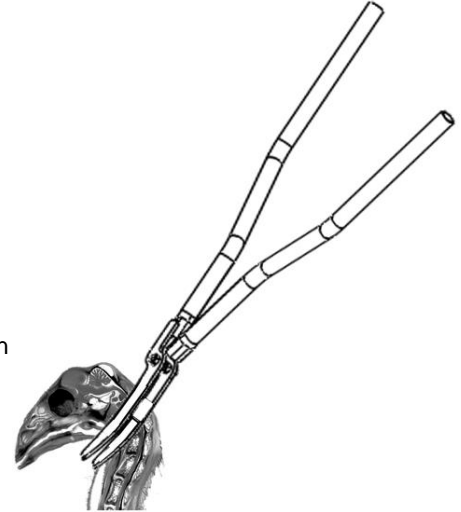

### Handling and applying the forceps

Warning: Killing without prior stunning is not permitted!!! This is done by using the SG device. You can find more information about the product on the homepage.

Grasp the device with both hands at the rear end of the handles.

The arrangement of the thighs at the front is irrelevant.

**Important:** Position the pliers directly below the head as shown in Figure.

Coming from behind, the pliers must be applied high up. If the pliers are applied to the side or too deep, the air is squeezed out of the animal, but the neck is not broken!!

Squeeze the pliers with all your strength. The cervical spine should now be severed. Check with your hand whether the cervical vertebra has been severed. Only skin should be felt in the affected area.

### Care and Maintenance


Clean the device after each use.

To correct any play that may arise in the pivot point, loosen the nut (POS.1). Adjust with the inner nut (POS.2) until the desired Mobility is almost established.

Tighten the outer nut (POS.1) again.

Note: By tightening the outer nut, the play is reduced again and the mechanism may be jammed. Leave some slack accordingly when tightening the inner nut over.

The use of lubricant can be dispensed with.

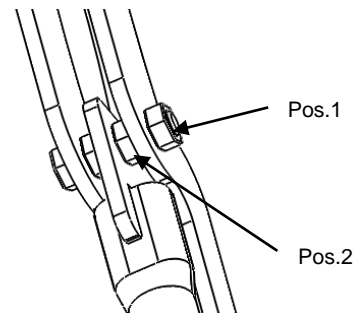

### Copyright protection

These operating instructions are protected by copyright.

Reprinting and duplication of any kind, including extracts, require the manufacturer's written approval.

The manufacturer reserves the right to make misprints and the right to make changes to devices, packaging and all accompanying documents such as operating instructions without prior notice.